

Temperature sensor replacement

Sparepart Instruction for HC



Rev. 1.0

Vertical units


T1



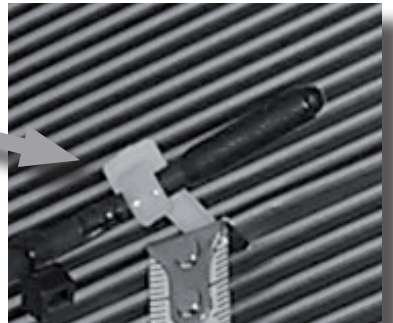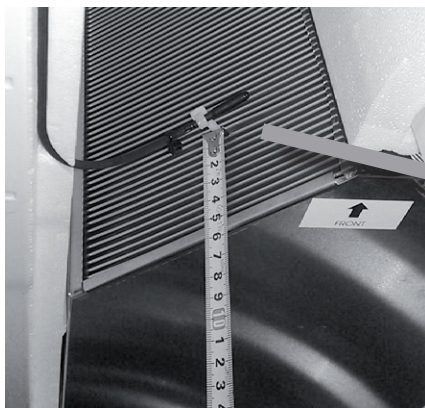T2



Tools

 

PH 2

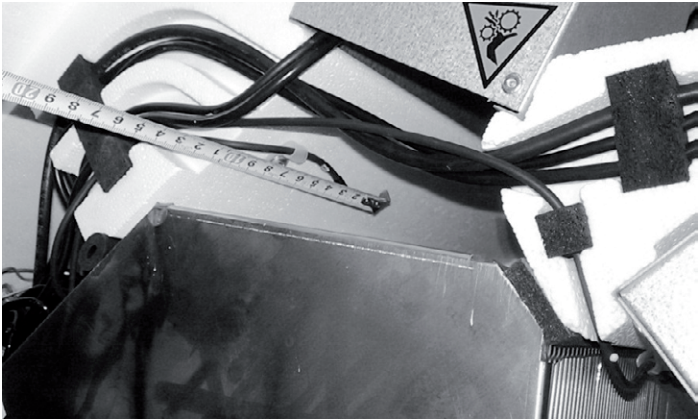
 
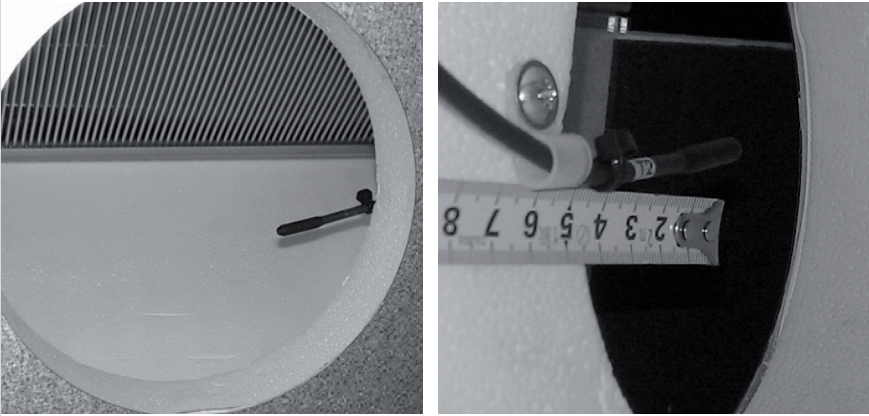
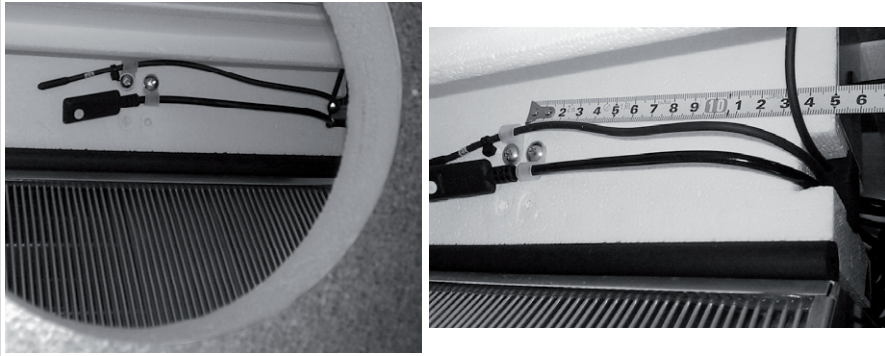
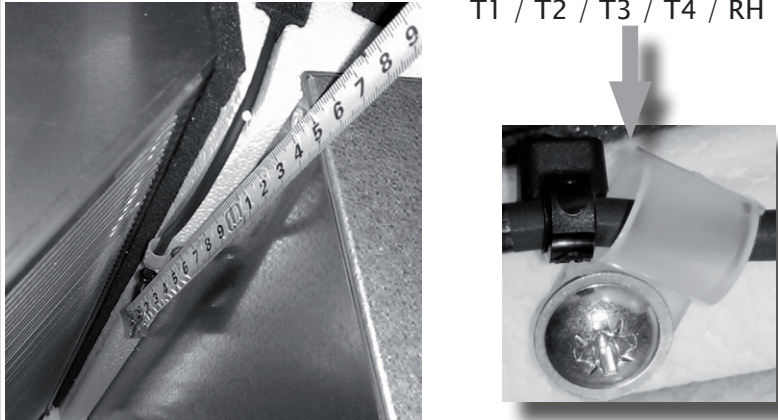
T3



T4



Horizontal units

	T1	
<p>Tools</p>  <p>PH 2</p>	T2	
	T3	
	T4	 <p>T1 / T2 / T3 / T4 / RH</p>



070783