


Software update

Follow these steps in order to update the software version.

Step	Action
1	Use an empty USB memory stick.
2	Obtain latest software version from Dantherm and copy the file to the USB memory stick.
3	Insert the USB memory stick in the USB port of the control panel of the unit.
4	The unit will now auto detect the new software and install it. The installation process should take no more than 30 seconds. During the process the display shows: "Erasing - Flashing - Done - Log" and a log file is stored on the USB memory stick. Note: If the display only shows the "Log" message, when the USB is inserted and returns back to default view some seconds later, the software has NOT been updated successfully. The reason may be a wrong format of the USB memory stick. Try to format the USB memory stick to FAT32 (see description below) and repeat the software update procedure again.
5	When the display went back to default view the memory stick can be removed.

Formatting to FAT32

Format the USB memory stick to FAT32 file system by following the below steps.
(Note: All data on the USB memory stick will be erased during the formatting process.)

Step	Action
1	Insert a USB memory stick in the USB port of the computer. Supports total drive volume of max 16Gb only.
2	Press WIN key ()+r
3	Type: CMD - press enter
4	Type: format /FS:FAT32 X: - press enter. X = letter of the USB drive
5	When you get the following message: Insert new disc for drive X: and press ENTER when ready - press enter.
6	When the disc has been formatted with a 100% - press enter to complete the formatting process.