


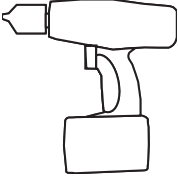

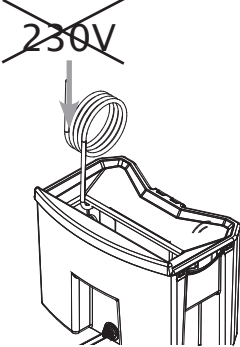
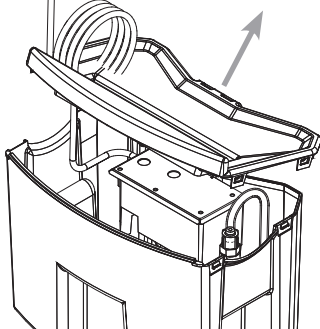
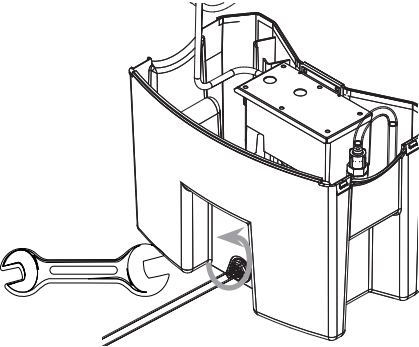
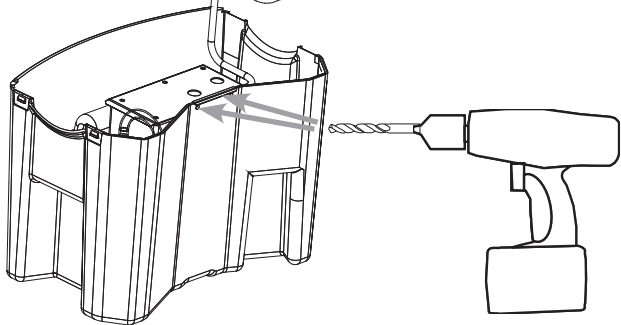
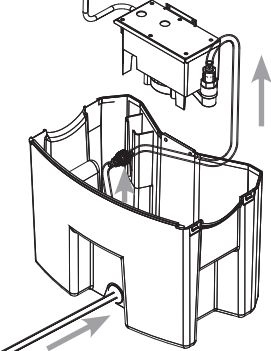
Condensate pump - CDT

Sparepart Instruction for 062218

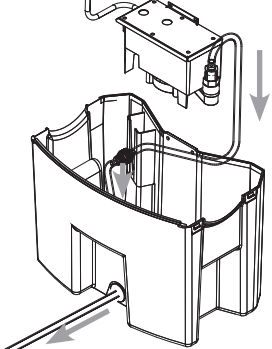
 


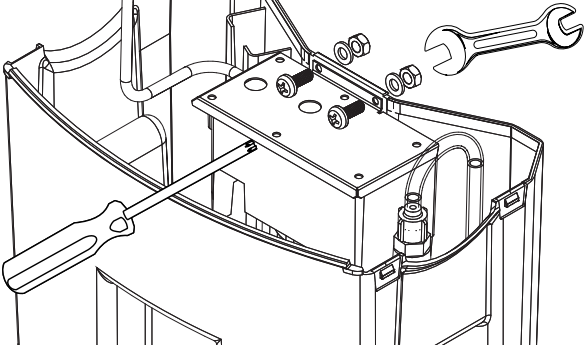
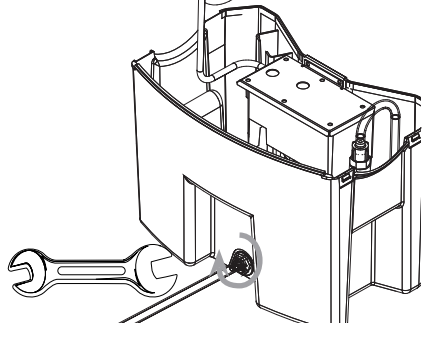
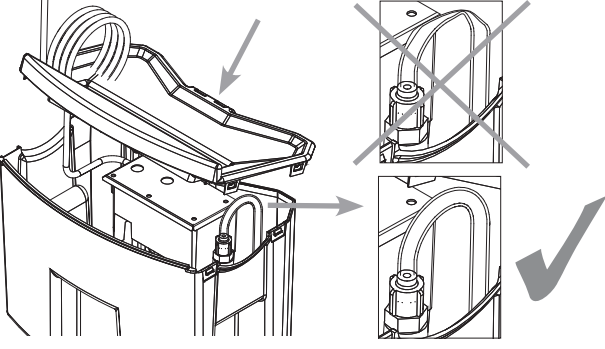
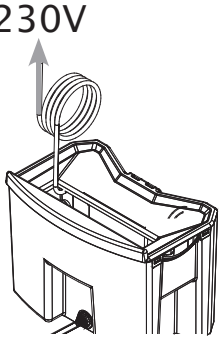
Rev. 1.0

Dantherm[®]
CONTROL YOUR CLIMATE

Removal

<p>Tools</p>  <p>17mm 21mm</p> <p>+</p>  <p>+</p>  <p>ø5</p>	1	
	2	
	3	
	4	
	5	

Mounting new

	1	
<p>Tools</p>  <p>PH2</p> <p>+</p>  <p>17mm 21mm</p> <p>+</p>  <p>7 mm</p>	2	
	3	
	4	
	5	<p>230V</p> 



075316

Dantherm Air Handling A/S

Marienlystvej 65
7800 Skive
Danmark
www.dantherm.com
service@dantherm.com

Dantherm[®]
CONTROL YOUR CLIMATE